

Instructions for Ink Change in Bulk Supply Station

Step 1: Remove bottle of ink from Bulk Supply Station.

Step 2: Drain all of the ink from the reservoir of the Bulk Supply Station.

Step 3: Drain all of the ink from each individual line of the Bulk Supply Station.

Step 4: Install the bottle of Flush Solution.

Step 5: Using the open ended priming tube w/ male fitting provided for installation, drain the entire bottle of solution into a waste container. While performing this step you will want to flush each line of the Bulk Supply Station. Flush the BSS with ALL (1 Liter) of the solution and make sure to drain it completely.

Step 6: Install new bottle of ink.

Step 7: Prime each line of the system using the priming tube.

END